Versatis_C350_1ère_couv_En:Versatis 21/07/2010 13:49 Page 1

ALCATEL

Versatis C350 / Versatis C350 Duo/Trio

User's guide

Versatis_C350_Couv_En:Versatis 09/07/2010 12:35 Page 1

Versatis C350 / Versatis C350 Duo/Trio

Contents of the package

Versatis C350

The box contains the following elements:

- the base
- the handset
- the line cord
- the power supply
- the battery compartment cover
- the batteries
- the User's Guide.

Versatis C350 Duo/Trio

- the additional handset(s)
- the charger(s)
- the batteries
- the battery compartment covers
- the charger power supplies.

Please read this guide carefully to get to know the main features of your **Versatis C350** and read the safety instructions before using it. We would also ask you to share the safety guidelines contained in this guide with all family members, and especially children.

Parents and those in charge of very young children are reminded that they must always be careful not to let children place any metallic objects or plastic items or parts in their mouths, except for safe eating utensils.

Versatis_C350_Couv_En:Versatis 09/07/2010 12:36 Page 2

Versatis C350 / Versatis C350 Duo/Trio

The handset keys

- Take call
- Flash/Access to operator services*

- Hang up
- Turn handset on/off
- In menu: back to the home screen

- Open Phonebook

- Open menu
- Confirm
- Secrecy/Mute

- Back + Erase
- Internal/conference call

- Lock keypad (long press)

- Increase earpiece/ hands-free volume
- Open Received Calls list*

- Open Dialled Calls list
- Insert pause in dialling (long press)
- Decrease earpiece/ hands-free volume

- Enable/Disable hands-free

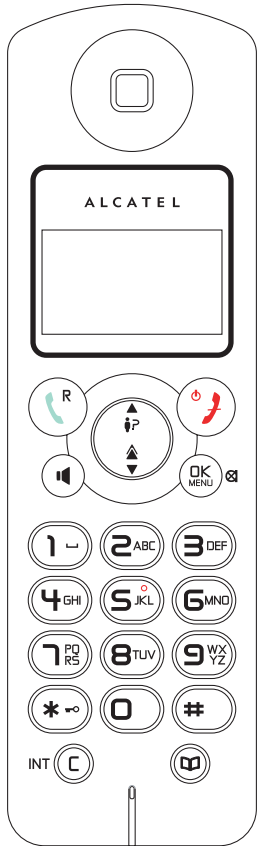

Main screen icons

EXT INT External/internal call in progress	Microphone off (Secrecy/Mute enabled)
Unanswered calls*	Alarm set
On steady: good signal quality Flashing: poor signal quality or handset not registered	New message on operator voicemail*
Battery charge level	Hands-free enabled
	Keypad locked

Base key and LEDs

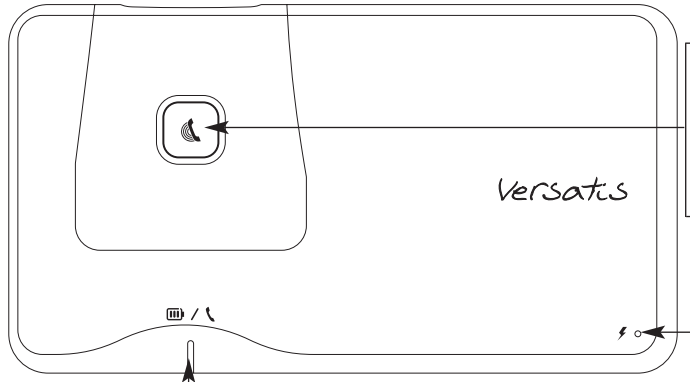

- Short press: page handset
- Long press: register handset

Green:
On steady: power supply connected

Red:

On steady:
- Handset charging
- Call in progress

Flashing:
- Paging handset
- Incoming call
- Registering handset
- New message

* Subject to availability of service and subscription from your network operator.

Versatis_C350_En:Versatis 20/07/2010 13:05 Page 1

1. FIRST USE 3
1.1 Installing the base 3
1.2 Installing the handset 4
1.3 Using the handset 5

2. USING THE TELEPHONE 6
2.1 Making a call 6
2.2 Answering a call 6
2.3 Redialling one of the last numbers called 7
2.4 Adjusting the earpiece volume 7
2.5 Secrecy / Mute (microphone off) 7
2.6 Hands-free mode 8
2.7 Locating a handset (paging) 8

3. YOUR PHONEBOOK 9
3.1 Storing names and numbers 9
3.2 Using the phonebook to make calls 10
3.3 Modifying names / numbers 10
3.4 Deleting names / numbers 10
3.5 Hot keys 11

4. USING YOUR VERSATIS C350 WITH THE OPERATOR'S VOICEMAIL SERVICE 11
4.1 Receiving voicemail messages 11

5. IDENTIFYING CALLERS 12
5.1 How to read the caller ID data 12
5.2 Viewing the Received Calls list 12
5.3 Calls list / storing / deleting a call 13

6. CUSTOMIZING YOUR HANDSET 14
6.1 Ringtones 14
6.2 Ringer volume 14
6.3 Setting the date and time 14
6.4 Beep tones on/off (key tones / low battery / out of range) 15
6.5 Auto-answer on/off 15
6.6 Naming a handset 16
6.7 Selecting the display language 16
6.8 Keypad lock/unlock 16

7. BASE SETTINGS 17
7.1 Registering handsets 17
7.2 Uninstalling a handset 18
7.3 Changing the PIN 18
7.4 Restoring the default settings 19
7.5 Line settings 19

Versatis_C350_En:Versatis 20/07/2010 13:05 Page 2

8. USING YOUR TELEPHONE WITH MULTIPLE HANDSETS 20
8.1 Using the intercom feature 20
8.2 Transferring an outside call to another handset / Shuttling calls 20
8.3 Three-way conference (2 internal parties and one external) 21
8.4 Answering an outside caller during an intercom call 21
9. TECHNICAL SPECIFICATIONS 22
10. TROUBLESHOOTING 23
11. SAFETY 25
12. ENVIRONMENT 26

Versatis_C350_En:Versatis 20/07/2010 13:05 Page 3

1. FIRST USE

1.1 INSTALLING THE BASE

1.1.1 Precautions

The signal quality will depend on the location and environment of the base and handset. Position your **Versatis C350** away from sources of excessive heat (radiators, direct sunlight, etc.) and protect it from vibrations and dust. Never allow your telephone to come into contact with water or other liquids, or with aerosols. To reduce the risk of interference and optimize reception, take particular care not to install the base in the immediate vicinity of windows, large metal objects, reinforced concrete, televisions, music centres, VCR or DVD players, halogen lamps or heating devices, fluorescent lighting, burglar alarms, microwave ovens, computers, etc.

This telephone requires an electrical power supply in order to function.

To clean your **Versatis C350**, use an antistatic cloth lightly moistened with water.

NB: Your **Versatis C350** is a DECT™* standard appliance designed to receive and transmit telephone calls. It is designed for connection to the public telecommunications network.

1.1.2 Connecting the base

- Connect the line cord and the power supply to the back of the base, as shown.
- Plug the telephone jack into the wall socket.
- Connect the mains adapter to a 230V/50Hz power supply.

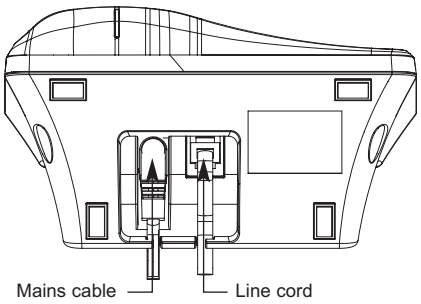

* DECT is a registered trademark of ETSI.

1.1.3 Connecting the Versatis C350 Duo/Trio charger(s)

- Plug each power supply cable into the connector underneath the charger.
- Connect each mains adapter to a 230V/50Hz power supply.

1.2 INSTALLING THE HANDSET

Fitting the batteries and charging up for the first time

Open the battery compartment at the back of the handset by sliding the cover. Insert the batteries: follow the signs (+/-) telling you which way round they go.

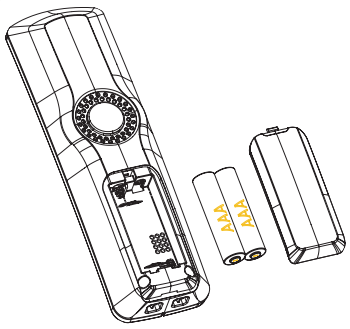

> ***Only use rechargeable batteries with exactly the same specifications as those supplied with the product.***
>
> ***Using non-rechargeable or non-conforming batteries can damage the product and could pose a health hazard (see Chapter 9 "Technical Specifications").***
>
> ***Batteries can split or leak if incorrectly inserted, opened or exposed to heat.***
>
> ***Never dispose of batteries in a fire: they could explode.***

- Place the handset on the base. The red base light (/) comes on.
  - The battery charge icon on the telephone becomes active.

Before using for the first time, we recommend that you leave the telephone to charge up on the base for 24 hours in order to optimize battery life and performance.

Check that the handset is registered on the base (icon steady) and take the line .

The dial tone confirms that your **Versatis C350** is working (if not, see Chapter 10).

> ***For better listening quality, remove the protective film around the handset display(s) and earpiece(s).***

1.3 USING THE HANDSET

1.3.1 Navigating the menus

Your cordless telephone is easy to configure and customize with its scrolling menu feature.

- To open the menu, press the menu key OK MENU.
- Use the ▲ and ▲ keys to scroll through the options and find the one you want.
- To confirm an option, press OK MENU.
- To return to the previous menu, press INT C.

1.3.2 Handset on/off

To turn the handset off:

- Press (long press).
  - The display is off. You cannot make calls. If a call comes in, the handset will not ring; nor will the base, but the base LED / will flash.

To turn the handset on again:

- Press (long press) or place the handset back on its base.

Versatis_C350_En:Versatis 20/07/2010 13:05 Page 6

2. USING THE TELEPHONE

2.1 MAKING A CALL

Direct dialling

- Press the R key to take the line.
- Dial the number to be called.
- Press to hang up at the end of the call.

The call timer appears on the screen after about 20 seconds.

Pre-dialling

With the pre-dialling feature you can enter and modify a number before making the call.

- Dial a number of up to 32 digits.
- To make a correction, press INT C.
- Press R to initiate the call.
- Press to hang up at the end of the call.

2.2 ANSWERING A CALL

When an external call comes in, the screen displays **CALL**.

To take the call:

- Press the R key.

  or

- Remove the handset from the base (if the auto-answer option is enabled) (see Section 6.5).

2.3 REDIALLING ONE OF THE LAST NUMBERS CALLED

The last 5 numbers dialled on your **Versatis C350** are stored in memory.

The correspondent's name will appear if it is listed in the Phonebook. Otherwise, only the number appears.

To recall a correspondent:

- Press ▲▼.
  - ▸ The Dialled Calls list appears on the screen.
- Scroll through the names or numbers, using the navigation keys.
- To initiate the call, just press R when you reach the name or number you want.

2.4 ADJUSTING THE EARPIECE VOLUME

During a call, you can adjust the handset volume using the navigation keys ▲ and ▲▼.

There are 5 volume settings.

2.5 SECRECY / MUTE (MICROPHONE OFF)

To put your correspondent on hold while you talk to someone next to you.

- Press OK MENU ⊠.
  - ▸ The microphone in the handset is disabled.
  - ▸ You can now talk to the person next to you without being overheard by the person on the other end of the line.
- Press the same key again to reactivate the microphone.

Versatis_C350_En:Versatis 20/07/2010 13:05 Page 8

2.6 HANDS-FREE MODE

You can press (🔊) at any time to switch over to hands-free mode.

▸ The icon appears on the display.

- To quit hands-free mode during a call, press (🔊).
- To adjust the hands-free volume, use the navigation keys and .

2.7 LOCATING A HANDSET (PAGING)

Forgotten where you left your handset?

- Press the key on the base.

  ▸ The handsets associated with the base will ring for 30 seconds.

  ▸ The line LED on the base flashes.

- Press the key on the base again, or any handset key, to stop the ringer.

Versatis_C350_En:Versatis 20/07/2010 13:05 Page 9

3. YOUR PHONEBOOK

You can store the telephone numbers of your 50 most useful contacts in the Phonebook.

Each Phonebook entry contains a name (up to 12 characters) and a number.

3.1 STORING NAMES AND NUMBERS

- Press OK MENU.
- Select **PHONEBOOK** and confirm.
- Select **ADD NUMBER** and confirm.
- Enter the name using the alphanumeric keypad and confirm.
- Enter the number using the alphanumeric keypad and confirm.

  For example:

  - for the letter S, press 7 PQ RS 4 times.
  - for the letter E, press 3 DEF twice.

To insert a space, press 1.

To make a correction, press INT C.

- Use ▲ or ▼ to select a ringtone for the new contact and press OK MENU to confirm.

3.2 USING THE PHONEBOOK TO MAKE CALLS

- Press to open the Phonebook.
- Key in the first letter of the name you are looking for, or scroll through the Phonebook using the navigation keys.
- Press to initiate the call.

3.3 MODIFYING NAMES / NUMBERS

- Press OK MENU to open the menu.
- Select **PHONEBOOK** and confirm.
- Select **EDIT NUMBER** with the navigation keys and press OK MENU to confirm.
- Select the entry you want to modify and confirm.
- The name appears. Modify it if necessary by pressing INT C and confirm.
- The corresponding number appears. Modify it if necessary by pressing INT C and confirm.
- Change the associated ringtone, if necessary, and confirm.
  - A beep signals that the modification has been made.
- Press to return to the main screen.

3.4 DELETING NAMES / NUMBERS

- Press OK MENU to open the menu.
- Select **PHONEBOOK** and confirm.
- Select **DEL NUMBER** to remove a single entry (or **DELETE ALL** to erase them all) and confirm.
- Select the entry using or , and confirm with OK MENU.
- The message **DELETE?** appears; press OK MENU to confirm.

Versatis_C350_En:Versatis 20/07/2010 13:05 Page 11

3.5 HOT KEYS

You can store 3 numbers in memory on keys 1, 2 and 3.

- Press OK MENU to open the menu.
- Select **PERSONAL SET** and confirm.
- Select **DIRECT MEM.** and confirm.
- Select the key on which you want to store the number and confirm.
- Modify by pressing INT C if necessary, then key in the number to be memorized, and confirm.

A long press on 1, 2 or 3 automatically dials the stored number.

4. USING YOUR VERSATIS C350 WITH THE OPERATOR'S VOICEMAIL SERVICE

By subscription to your operator, you can have your calls diverted to a voicemail box when you are absent. For more details, contact your operator.

4.1 RECEIVING VOICEMAIL MESSAGES

When new messages are received, the base LED (/) flashes and the icon appears on the screen.

The icon disappears once you have consulted the voicemail messages.

If this doesn't happen automatically:

- Press ▲ to open the Calls list.
- Select the operator voicemail number.
- Press the 5 JKL key for 3 seconds.
  - ▸ The number is erased, the icon on the handset(s) disappears and the base LED stops flashing.

Versatis_C350_En:Versatis 20/07/2010 13:05 Page 12

5. IDENTIFYING CALLERS

5.1 HOW TO READ THE CALLER ID DATA

If you are subscribed to your operator's Caller ID service, and if the network transmits the relevant data, the caller's name or number will be shown on the screen as indicated below.

The numbers, dates and times of incoming calls are recorded in the Calls log.

During the call, the following messages (from the network) are displayed:

- the caller name and number, if the number is stored in your Phonebook or transmitted by the network

- the caller number, if not listed in your Phonebook

- **PRIVATE** if the caller is using Caller ID Blocking to avoid identification

- **UNAVAILABLE**: to display the date and the caller number in the Calls log, press INT C once to display the date and a second time to display the number.

5.2 VIEWING THE RECEIVED CALLS LIST

If you are subscribed to the Caller ID service*, your **Versatis C350** will log the last 40 calls received, along with the date and time of each call.

Unanswered calls are flagged by the icon on the main screen.

To consult these calls:

- Press ▲.
- Scroll through the list using the navigation keys.

To view the details transmitted by the network (number, name, date and time) press INT C as many times as required.

* Requires subscription to the network operator's Caller ID service, subject to technical availability

Versatis_C350_En:Versatis 20/07/2010 13:05 Page 13

5.3 CALLS LIST / STORING / DELETING A CALL

To access the calls list:

- Press ▲ to open the menu.

Calling back a correspondent from the calls list

- Once you have selected a call from the list, just press R.

Deleting an entry from the list

- Press ▲, select the entry you want to delete, and press OK MENU to confirm.
- Select **DEL NUMBER** using the navigation key and press OK MENU to confirm.
- The message **DELETE?** appears; press OK MENU to confirm.

Storing the call details

- Press ▲, select the number you want to save, and press OK MENU to confirm.
- Select **SAVE NUMBER** and press OK MENU to confirm.
- The name appears. Press OK MENU to confirm.
- The number appears. Press OK MENU to confirm.
- Select a ringtone for the new contact and press OK MENU to confirm.

Versatis_C350_En:Versatis 20/07/2010 13:06 Page 14

6. CUSTOMIZING YOUR HANDSET

This section tells you how you can personalize your **Versatis C350**.

6.1 RINGTONES

- Press (OK MENU) to open the menu.
- Select **PERSONAL SET** using the navigation keys and press (OK MENU) to confirm.
- Select **HANDSET TONE** using the navigator and press (OK MENU) to confirm.
- Using the navigation key, select **RING MELODY** and confirm.
- Choose a melody (from 1 to 5) and confirm.

6.2 RINGER VOLUME

- Press (OK MENU) to open the menu.
- Select **PERSONAL SET** using the navigation keys and press (OK MENU) to confirm.
- Select **HANDSET TONE** and press (OK MENU) to confirm.
- Select **RING VOLUME** and press (OK MENU) to confirm.
- Using the navigator, select the desired volume (level 1 to 5, or silence) and press (OK MENU) to confirm.

6.3 SETTING THE DATE AND TIME

- Press (OK MENU) to open the menu.
- Select **CLOCK/ALARM** using the navigation key and confirm.
- Select **DATE/TIME** using the navigation key and confirm.
- Enter the date (DD/MM format).
- Enter the time (HH:MM format).

! ***To enable/disable the date and time display in standby mode, do a long press on*** (OK MENU)⊠.

! ***If you are subscribed to the Caller ID service, the date and time will be updated automatically.***

6.4 BEEP TONES ON/OFF (KEY TONES / LOW BATTERY / OUT OF RANGE)

- Press (OK MENU)⊠ to open the menu.
- Select **PERSONAL SET** and confirm.
- Select **HANDSET TONE** and confirm.
- Select **BEEP** and confirm.
- Select **KEY TONE** or **LOW BATTERY** or **OUT OF RANGE** and confirm.
- Select **ON** or **OFF** and confirm.

6.5 AUTO-ANSWER ON/OFF

The “Auto-answer” feature is enabled by default.

It enables you to pick up calls by lifting the handset off the base, without having to press (R).

To turn this feature off:

- Press (OK MENU)⊠ to open the menu.
- Select **PERSONAL SET** with the navigation keys and confirm.
- Select **AUTO ANSWER** and press (OK MENU)⊠ to confirm.
- Select **OFF** and confirm.
- To reactivate the feature, follow the same procedure but select **ON** with the navigation keys.

6.6 NAMING A HANDSET

You can change the name of your handset.

- Press OK MENU to open the menu.
- Select **PERSONAL SET** with the navigation keys and press OK MENU to confirm.
- Select **HANDSET NAME** with the navigation key and press OK MENU to confirm.
- To make a correction, press INT C.
- Key in the new name (max. 10 characters) and press OK MENU to confirm.

6.7 SELECTING THE DISPLAY LANGUAGE

Your **Versatis C350** has 12 language options for the menu. To change the language:

- Press OK MENU to open the menu.
- Select **PERSONAL SET** with the navigation keys and confirm.
- Select **LANGUAGE** using the navigation keys and press OK MENU to confirm.
- Choose the language and press OK MENU to confirm.

6.8 KEYPAD LOCK/UNLOCK

To avoid accidentally pressing keys on the handset when it is not on its base, you can temporarily lock the keypad (you can still receive calls).

To lock the keypad:

- Long press on *.

  ▸ The icon appears on the display.

To unlock the keypad:

- Long press on *.

Versatis_C350_En:Versatis 20/07/2010 13:06 Page 17

7. BASE SETTINGS

7.1 REGISTERING HANDSETS

You can have up to 5 handsets associated with ("registered on") the base of your **Versatis C350**. If you already have 5 handsets registered and want to replace one, you need to uninstall it first (see next Section) before registering a new handset.

The handset(s) delivered with your **Versatis C350** will already be registered on the base. If, however, a handset isn't getting the dial tone, and the display shows **UNSUBSCRIBED**, follow the registration procedure.

On the base:

- Press .
  - The red LED (/) on the base flashes. Your **Versatis C350** is now ready to link up with a new handset. This operation must be carried out within 90 seconds of pressing the key.

On the handset:

- Press OK MENU to open the menu.
- Select **ADVANCE SET** using the navigation keys and press OK MENU to confirm.
- Select **REGISTRATION** using the navigation keys and press OK MENU to confirm.
- Enter the PIN code (0000 by default) and press OK MENU to confirm.

When a handset is registered on a base, it is automatically assigned a number (from 1 to 5), which appears on the right of the screen. This is the number to be used for intercom calls.

NB: To cancel the handset registration, remove the batteries.

7.2 UNINSTALLING A HANDSET

> ! ***This procedure must be carried out on a different handset from the one you want to uninstall.***

- Press (OK MENU) to open the menu.
- Select **ADVANCE SET** using the navigation key and press (OK MENU) to confirm.
- Select **UNREGISTER** using the navigation key and press (OK MENU) to confirm.
- Enter the system PIN (by default, 0000) and press (OK MENU) to confirm.
- Select the handset to be uninstalled and press (OK MENU) to confirm.

7.3 CHANGING THE PIN

The system PIN is used for registering new handsets with your **Versatis C350**.

- Press (OK MENU) to open the menu.
- Select **ADVANCE SET** using the navigation keys and confirm.
- Select **PIN** using the navigation keys and press (OK MENU) to confirm.
  - ▸ The screen shows **PIN_ _ _ _**.
- Enter the 4 digits of the current PIN (0000 by default) and press (OK MENU) to confirm.
  - ▸ The screen shows **NEW_ _ _ _**.
- Enter the 4 digits of the new code and press (OK MENU) to confirm.

Versatis_C350_En:Versatis 20/07/2010 13:06 Page 19

7.4 RESTORING THE DEFAULT SETTINGS

- Press OK MENU to open the menu.
- Select **ADVANCE SET** and confirm.
- Select **RESET UNIT** and confirm.
  - The screen shows **CONFIRM?**.
- Validate the operation.
  - The handset beeps once.

Your **Versatis C350** has now returned to its default settings.

7.5 LINE SETTINGS

7.5.1 Setting the recall or flash time (R key)

- Press OK MENU to open the menu.
- Select **ADVANCE SET** using the navigation keys and confirm.
- Select **RECALL TIME** using the navigation keys and confirm.
- Select **SHORT** (100 ms) or **LONG** (250 ms) with the navigation keys and confirm with OK MENU.

Versatis_C350_En:Versatis 20/07/2010 13:06 Page 20

8. USING YOUR TELEPHONE WITH MULTIPLE HANDSETS

8.1 USING THE INTERCOM FEATURE

Calling an internal handset

- Press INT C.
  - Duo version: the handset automatically calls the other handset.
  - Trio version: enter the number of the internal handset you want to call.

To call all internal handsets

- Press INT C followed by *.

Answering an internal call

When you receive an internal call, the number of the calling handset is displayed along with **INTERCOM**.

- Press R to answer.
- To hang up at the end of the call, press .

8.2 TRANSFERRING AN OUTSIDE CALL TO ANOTHER HANDSET / SHUTTLING CALLS

To pass a call over to another handset

- Press INT C.
- Enter the number of the handset you want to call (Trio version only: with the Duo, the other handset is called automatically). The external correspondent is placed on hold.
- When the other handset answers, press to transfer the call.
- If the other handset doesn't answer, press INT C again to retrieve the external correspondent.

8.3 THREE-WAY CONFERENCE (2 INTERNAL PARTIES AND ONE EXTERNAL)

You can talk with an internal correspondent and an external correspondent at the same time.

When you are on the line with an external correspondent:

- Press INT C.
- Enter the number of the handset you want to call (Trio version only: with the Duo, the other handset is called automatically). The external correspondent is placed on hold.
- When the other handset answers, press INT C for 2 seconds until the word **CONFERENCE** appears on the screen.
- If the other handset doesn't answer, press INT C to retrieve the external correspondent.

8.4 ANSWERING AN OUTSIDE CALLER DURING AN INTERCOM CALL

When you are in intercom mode with another handset, you can still take outside calls.

To pick up a call:

- Press .
  - ▸ The intercom call is interrupted.
- Press R.
  - ▸ You are put through to the outside caller.

Versatis_C350_En:Versatis 20/07/2010 13:06 Page 22

9. TECHNICAL SPECIFICATIONS

Free field range	Up to 300 meters*
Indoor range	Up to 50 meters*
Handset battery life (average values)	10 hours talktime** 5 days standby**
Number of handsets	Up to 5
Intercom mode	Yes
Three-way conference (1 outside correspondent + 2 internal correspondents)	Yes
Electrical connection / Base mains adapter / Charger	Model TR 5060G Input: 100-240 V / 50-60 Hz / 0.2 A Output: 6 V DC / 500 mAh Or Model DM-SC060050 Input: 100-240 V / 50-60 Hz / 0.1 A Output: 6 V DC / 500 mAh Only use the adapters supplied with the telephone. Single-phase AC, excluding IT installations defined by the EN 60950 standard. Caution: the network voltage is classified as a hazard by the criteria of this standard.
Telephone connection	Appliance designed for connection to a TNV3 class (telecommunications network voltage) analogue telephone line as defined by the EN 60950 standard.
Batteries	Corun / Sanik – AAA – 1.2 V – 550 mA Only use the batteries supplied with the telephone. Using any other type of battery presents a risk of explosion. Used batteries must be disposed of in compliance with current environmental protection regulations.
Operating temperature	From 5 to 40° C

* Value may vary according to environment.
** Depending on initial battery charge.

Versatis_C350_En:Versatis 20/07/2010 13:06 Page 23

10. TROUBLESHOOTING

As a general rule, if a problem occurs, remove the batteries from all the handsets in your installation for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries.

Problem	Cause	Solution
Nothing appears on the display.	The device is not powered up.	Check the power supply connection.
	The batteries are flat.	Put the handset back on its base to recharge the batteries.
	The main screen is in standby.	Press any key on the keypad to reactivate it.
There is no dial tone.	The handset is not registered on the base.	See Section 7.1 “Registering handsets”.
	The batteries are flat.	Put the handset back on its base to recharge the batteries.
	The device is not connected to the telephone network.	Check that the phone cord is properly connected.
	The handset is out of range of the base.	Move nearer to the base.
	The line cord is incompatible.	Use the cord supplied with the telephone.
The reception quality is poor, or deteriorates during a call.	You are out of range of the base or in an environment subject to interference.	Move nearer to the base, or move the base 1 m.
	You have ADSL.	Connect an approved ADSL filter between the phone connector and the wall socket.
Your correspondent can't hear you.	The microphone is off: the Secrecy/ Mute function is active.	See Section 2.5 “Secrecy / Mute (microphone off)”.
The handset doesn't ring.	The handset ringer is off.	See Section 6.2 “Ringer volume”.

Problem	Cause	Solution
The batteries are still flat after several hours on charge.	The base or charger is not powered up.	Check your power supply connections.
	The handset batteries are defective.	Contact our Technical service if the telephone is under warranty, or ask your reseller to supply you with new batteries.

The store where you bought your telephone can also provide you with information and after-sales support.

Versatis_C350_En:Versatis 20/07/2010 13:06 Page 25

11. SAFETY

In the event of an electrical hazard, the mains adapter acts as 230V power isolating device. It should therefore, as a precaution, be installed close to the appliance and be easily accessible. To disconnect the device from the primary power source, the mains adapter must be removed from the 230V AC / 50 Hz socket.

If the mains adapter fails, it must be replaced by an identical model.

If not connected to the mains power, or if there is a mains power failure, telephones that use cordless handsets will not work.

You will then be unable to make or receive calls in the event of an emergency.

This is why we recommend that you also keep a conventional telephone – one that doesn't require a power supply – as a backup.

> ! ***Do not use your telephone to notify a gas leak when standing in the vicinity of the leak.***

It is recommended that you avoid using this device during electrical storms.

Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes, nose and mouth. In the event of contact, rinse the affected part for about twenty minutes with running water and seek urgent medical attention. Clean the product with absorbent paper or a dry cloth and contact your reseller for replacement batteries.

ATLINKS hereby declares that the **Versatis C350** and **Versatis C350 Duo/Trio** conform to the essential requirements and other applicable provisions of European directive 1999/5/EC.

CE

Versatis_C350_En:Versatis 20/07/2010 13:06 Page 26

12. ENVIRONMENT

This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are responsible.

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused. Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste.

If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.

- If you are a professional user, please follow your supplier's instructions.

- If the appliance is rented to you or left in your care, please contact your service provider.

Keen to preserve the environment, ATLINKS has equipped this appliance with a switching power supply, offering better energy efficiency. The advantages include not only very low electricity consumption, but also a more compact format than the conventional power supply units used by the previous range.

The used batteries from your telephone (if it has batteries) must be disposed of in compliance with current environmental protection regulations. Comply with your local regulations. Return your batteries to your reseller or dispose of them at an approved recycling centre.

Help us protect the environment in which we live!

Versatis_C350_En:Versatis 20/07/2010 13:06 Page 27

R&TTE DECLARATION OF CONFORMITY (DOC)

We,

ATLINKS EUROPE
22, Quai Gallieni
92150 SURESNES
FRANCE

Declare under our sole responsibility that the products Alcatel Versatis C350, Alcatel Versatis C350 Duo and Alcatel Versatis C350 Trio comply:

- With the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC) based on the following standards and other normative documents:
  - EN 60950-1:2006
  - EN 301406 V2.1.1 (2009)
  - EN 301489-01 V1.8.1:2008 / EN 301489-06 V1.3.1:2008

- With Commission regulation (EC) N° 278/2009 of April 6, 2009 implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to ecodesign requirements for no-load condition electric power consumption and average active efficiency of external power supplies

- With Commission regulation (EC) no. 1275/2008 of December 17, 2008 implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to ecodesign requirements for standby and off mode electric power consumption of electrical and electronic household and office equipment.

This conformity is understood as being effective if the product for which it is given is installed and used according to the instructions provided in the user's guide.

Paris, June 22nd, 2010
Didier GOUJARD
CEO ATLINKS EUROPE

Versatis_C350_1ère_couv_En:Versatis 21/07/2010 13:49 Page 2

ATLINKS Europe

22, Quai Gallieni - 92150 Suresnes - France

**S.A.S. (Simplified Joined Stock Company) with capital of 500 000 euros -
Registration number: 508 823 747 R.C.S. Nanterre**

© ATLINKS 2010 - Reproduction prohibited.
The manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations.
ALCATEL, VERSATIS and ATLINKS are registered trademarks.
The Alcatel logo and Alcatel name are trademarks of Alcatel and used under licence by ATLINKS.

Réf. : XXX XXX XXXXX 21/07/10